

# Panic exit devices

Indications for cleaning and maintenance



## ■ GENERAL INFORMATION:

Our range of devices is manufactured from durable materials which, while requiring minimal care, must not be neglected. Following a simple cleaning schedule will contribute to maximising the performance and lifespan of the product and its components, and will help maintain the visual appearance of the individual parts. Some degree of ageing is inevitable, however, and depending on the product type, a slight loss of sheen and minor discolouration are normal, especially if the device is installed outdoors. This alteration in sheen and colour is an intrinsic quality of the materials and will not affect the characteristics of the product or the durability of the materials themselves.

## ■ INSTALLATION

**Important: follow the instructions provided with the device precisely.**

Also note the following:

- During installation, take care to keep metal filings out of the mechanism of the device;
- Painting the device may cause the reclosing mechanism to malfunction;
- Use the fastener screws included with the device, or use suitable screws which will not compromise the operation of the product;
- Do not tamper with the device;
- Use the transformers indicated for the individual products to power any electric or electronic components.

## ■ CLEANING

**Important: never use abrasive or aggressive products to clean any part of the device.**

For routine cleaning, use a solution of neutral soap or detergent in hot water, and then rinse and dry the device.

To remove fingerprints or greasy or oily stains, use a solution of detergent in hot water or an organic solvent.

All moving parts and striker plates must be kept free of dirt and debris at all times to prevent the possibility of jamming when opening or malfunction when reclosing.

## ■ MAINTENANCE

**Important: to ensure that the product performs correctly in compliance with applicable European standards and regulations, follow the instructions provided with the device precisely.**

Also, as a general rule, carry out the following routine maintenance activities at intervals no longer than once every month or at least once every 20,000 cycles:

- Inspect and operate the device to check that all components are in proper working order;
- Check that all fasteners are tightened correctly;
- Check that the aperture/s of the keep/s are not obstructed;
- Check that the device is lubricated correctly as indicated in the assembly instructions;
- Check that no additional locking devices have been installed on the door after original installation;
- Periodically check that all the components of the system are still conformant with the specifications of the certified component list originally provided with the system itself.

## NOTE:

The original instructions for devices may be downloaded from the website [www.iseo.com](http://www.iseo.com)